

Wizard Gumball Machine

Coin Mechanism replacement & Timing

Step 1 – Remove Hat

Remove the “hat/lid” from the gumball machine with the key provided. Turn the key counter clockwise to release the lock from the center rod. Push down firmly while turning the key.

Step 2 – Remove coin mechanism/face plate

Remove the security screws from all four corners of the “ face plate/square plate” and then remove the two screws directly above the coin mechanism. While securely holding the coin mechanism, gently push the front of the “globe/dome/clear ball” upwards. This should release the coin mechanism & face plate from the machine.

Step 3 – Time gum wheel

Once face plate/coin mechanism is removed the machine can now be timed. Look into the exposed head of gumball machine you will see a silver metal “hopper” with an open area and a visible white plastic wheel. Rotate “white plastic gum wheel” until you see a black line, now center the black line.

Step 4 – Re-install NEW coin mechanism/face plate

Reverse Step 2 and remember to push globe down and secure with all 6 security screws.

Step 5 – Test machine

Before fully loading globe with gumballs, make sure you test with 10-15 quarters for proper vending & timing.

Should you require further assistance, call Global Gumball, Inc. Customer Service at 888-294-9273 or 480-497-4364